All of our electrical appliances conform to pre-existing EC Directives 2006/95/EC (Low Voltage Directive) and 2004/108/EC (EMC Directives).

For further information please visit http://www.esc.org.uk/industry/product-safety/product-testing-screening/kitchen-appliances/

UK & EU Guarantee

Your new Andrew James product comes with a 24 month guarantee and a 2 year fixed warranty, effective from receipt confirmation. Your receipt or order number is required as proof of purchase date so it is imperative that you keep it safe. This guarantee only applies if the item has been used solely for the use intended, and all instructions have been followed accordingly. Please note this product is for domestic use only and not for commercial use.

Abuse of your product will invalidate the guarantee. Returned goods can only be accepted if repackaged properly within the original colour product box, and presented with the original receipt of sale/order number. This does not affect your statutory rights.

Returned products must be cleaned and returned to us in as close to delivery condition as possible.

If your product develops a problem within the first 12 months of the fixed warranty, we will pay all shipping costs to have it returned to us. After 12 months the customer will be liable for the cost of returning the product to us. We will then pay to have the repaired/replaced item shipped back to the customer.

If you wish to return your item for a full refund, you have the right to do so within the first 7 days. For our returns policy please go to www.andrewjamesworldwide.com

Customers are responsible for any taxes applied to our products when they are shipped outside of the EU.

All of our prices are inclusive of VAT.

Once a product has been returned to us, we will aim to repair or replace it within 30 days of receipt.

The guarantee does not cover any defect arising from improper use, damage, build-up of lime scale or repair attempts made by third-parties. Also, the guarantee does not cover normal wear and tear of individual parts.

andrew james

Filter Coffee Machine

Please read the manual fully before using the appliance and keep the manual safe for future reference.

Safety guide

When using any electrical appliance, basic safety precautions should always be followed including:

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children less than 8 years old.
- Always ensure the voltage on the rating label corresponds to the voltage in your home.
- Check the power cord and plug regularly for any damage. If the cord or the plug is damaged, it must be replaced by a qualified electrician or a service repair centre. If in doubt please contact our customer service team.
- The appliance is intended for domestic use only. Industrial or commercial use will void the warranty. The supplier cannot be held responsible for injury or damage if the appliance has been used for anything other than its intended use.
- Incorrect operation and use can damage the appliance and cause injury to the user.
- Do not use the appliance if it has been dropped or damaged in any way. If the unit has been damaged take the unit for examination and or repair by an authorised service agent.
- Do not immerse or expose the motor assembly, plug or the power cord in water or any other liquid for any reason.
- If the supply cord is damaged, it must be replaced by the manufacturer or by someone who is suitably qualified to avoid a potential hazard.
- Do not let the cord hang over the edge of a table or counter. Ensure that the cord is not in a position where it can be pulled or tripped over accidentally.
- Do not allow the cord to touch hot surfaces and do not place the cord near hot gas, electric burners or in a heated oven.

Electrical information

Please note:

It is extremely important that the wires or cores in the flex are connected to the correct terminals in the plug. If the colour of the mains lead of the appliance does not correspond with the coloured markings identifying the terminals in your plug proceed as follows:

- The **Live** (**Brown**) wire connects to the right- most live (L) terminal nearest to the fuse.
- The **Neutral** (**Blue**) wire connects to the left-most neutral (N) terminal.
- The **Earth** (**Green and Yellow**) wire connects to the central, top most earthed (**E**) terminal.

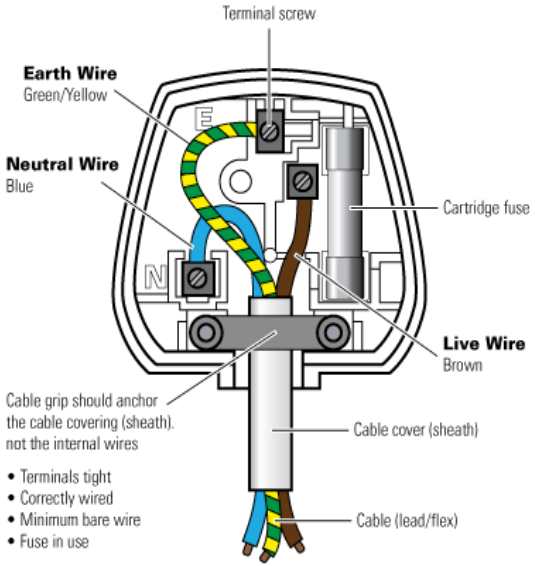

Warning:

If the appliance is double insulated indicated by the double insulated symbol: ⧈

it should not have an earth wire or earth connection.

Plug

The plug must be protected by the correct AMP fuse; this will be indicated on the case of the plug. Only BSI or ASTA approved fuses should be used. When changing the fuse always replace it with a fuse that is of the same identical rating as the original. If you are unsure about which plug or fuse to use, always refer to a qualified electrician.

Please note after replacing the fuse, ensure that the cover is correctly fitted back onto the plug. Never attempt to run the appliance if the plug does not have a cover. If a moulded plug is fitted and has to be removed take great care in disposing of the plug and severed cable, it must be destroyed to prevent it from engaging into a socket. If the supply cord is damaged it must be replaced by a service agent or a similarly qualified person in order to avoid a hazard.

Disposal of the appliance

Please note that this Andrew James product is marked with this Symbol:

This means that this product must not be disposed of together with ordinary household waste, as electrical and electronic waste must be disposed of separately.

In accordance with the WEEE directive, every member state must ensure correct collection, recovery, handling and recycling of electrical and electronic waste. Private households in the E.U. can take used equipment to special recycling stations free of charge. In certain member states used apparatus can be returned to the dealer where they were bought on the condition you buy new products. Contact your retailer, distributor or the municipal authorities for further information on what you should do with electrical and electronic waste.

- Always remove the plug of the appliance safely. Do not pull on the appliances cord to remove the appliance plug from the electrical socket.
- Never handle or operate the appliance with wet hands.

Appliance specific safety instructions

- The use of accessories not recommended by the supplier may result in damage to the appliance and injury to the user.
- Do not use the appliance outdoors.
- Scalding may occur if the cover is removed during brewing cycles.
- Do not let the coffee maker operate without water.
- Do not overheat the coffee pot as it may crack.

Before first time use

- Check that all accessories are intact and in correct working order.
- Add water into the water tank to max level and brew with only water several times. Discard the water and clean all detachable parts with warm water.

Appliance components illustration

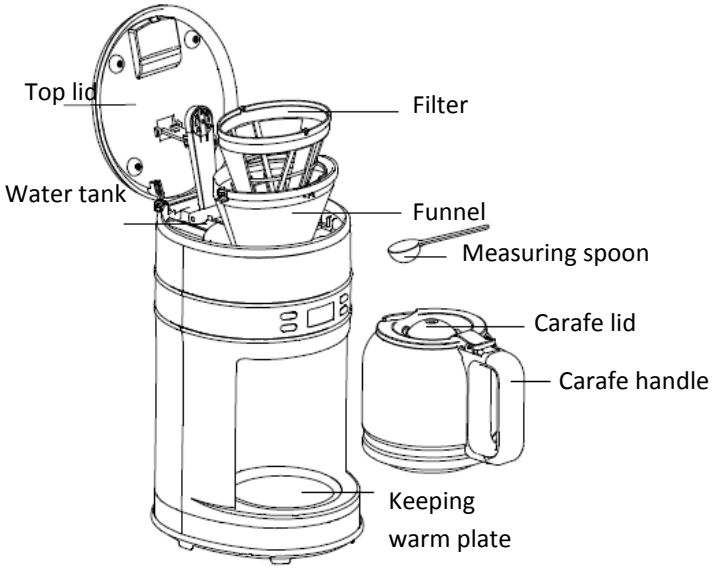

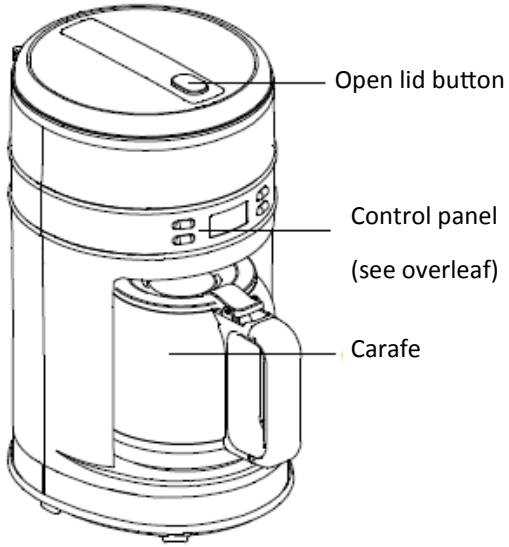

Cleaning and maintenance

- Always remove the plug from the socket before cleaning the appliance.
- Wipe the main body of the coffee maker with a wet cloth only.
- Always ensure that the coffee pot has cooled down completely before cleaning.
- Clean all detachable parts after each use in hot, soapy water.
- Always ensure any removable parts are clean and dry before reassembling the appliance.
- Never use a dishwasher to clean any part of the coffee maker including the coffee pot.
- When the appliance is not in use, place the appliance in a dry and ventilated area.

Removing mineral deposits

Regularly remove mineral deposits from the appliance. The frequency you remove mineral deposits depends upon the amount you use the appliance.

To remove mineral deposits:

1. Fill the water tank with water and descaler to the MAX level using a ration of 1 parts descaler to 4 parts water. Please use household descaler and not industrial descaler, citrus juice can also be used.
2. Place the carafe onto the warm plate.
3. Run a brew cycle as mentioned in “Operating the appliance” without placing coffee into the filter holder.
4. After the coffee machine has percolated the equivalent of one cup, press the “ON/AUTO/OFF” button twice.
5. Leave the solution to work in the appliance for 15 minutes.
6. Run another brew cycle until all the descaler has passed through the appliance.
7. Then run clean water through appliance another three times before using again.

Control panel

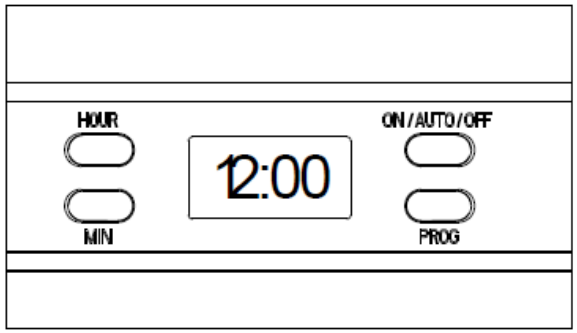

Operating the appliance

1. Press the open lid button to open the top lid and fill the water tank to in-between the indicated marks (MIN/MAX) with clean drinking water.
2. Place the funnel into the funnel support, then add a filter into the funnel support.
3. Add the required amount of coffee powder into the filter. It is recommended to use one measured spoon of coffee powder per cup (spoons can be purchased separately at www.andrewjamesworldwide.com). Close the lid top.
4. Place the carafe onto the hot plate of the appliance.
5. Plug the power cord into the electrical outlet. The LCD will display “12:00” and the colon will flash. The backlight of the LCD will illuminate once it is plugged in.
6. Press the “ON/AUTO/OFF” button, the button will turn red and the appliance will begin to work.
7. To cancel the brew process at any point press the “ON/AUTO/OFF” button twice and the indicator will be illuminated blue and stop flashing, after ten seconds the appliance will stop working.
8. Remove the carafe and serve once the brewing process has finished. The coffee machine has a “keep warm function” that will last for two hours after the brewing process.

Note: You can remove the carafe at any point as the coffee machine will stop dripping automatically. But the time cannot exceed 30 seconds.

Automatic start function

If you do not wish coffee to made immediately, please follow the instructions below to delay the start of the operation.

1. Follow steps 1-5 in “Operating the appliance”.
2. For example if the time is 17:50 and you wish to delay the coffee making process till 20:15 please follow these set functions.
3. Press the “PROG” button once, the display will now show “CLOCK” in the upper-right corner of the display.
4. Press the “HOUR” and “MIN” button continuously to set the present time (real clock)
5. Press the “PROG” button once again and the word “TIMER” will show up on the left corner of the display.
6. Set the delayed starting time by pressing the “HOUR” and “MIN” button repetitively until it reaches the required brewing time.
7. After setting both of the times press the “PROG” button until the letter of “CLOCK” and “TIMER” disappears. The blue light in the LCD will illuminate for ten seconds and then disappear.
8. Press the “ON/AUTO/OFF” button twice, the indicator in it will now illuminate blue and flash. The clock will now display the current time. To view the delayed start time press “PROG”.
9. When the coffee machine is ready to start brewing, the “ON/AUTO/OFF” will stop flashing blue and will turn red. The coffee maker will shut off automatically after two hours if it is not manually shut off after brewing.

Note: To cancel the delay function press the “ON/AUTO/OFF” button once. To start the brewing process immediately press the “ON/AUTO/OFF” button twice.

Memory

If the power supply is broken or has been unplugged unintentionally during operation, once reconnected the appliance will begin operating from the point it was cut off. The cord however must be replaced within 15 seconds to ensure that this occurs. If the appliance is unplugged for more than 15 seconds you must start the appliance operation again.